## care Instructions **ITNATAO9MI**

the Optic should give you years of service. Here are a few important handling Thank you for purchasing the 0-360 Panoramic Optic! With proper care and handling,

provided to remove dust before shooting. Use lens cleaning paper or lens cloth only if coating, touching or rubbing on its surface can cause scratches. Use the dust blower 1) Do not touch, handle, or polish the mirror! While the mirror does have a protective :suoitonitsui

2) Avoid dropping or mishandling the unit, as it is a sensitive glass optical device. absolutely necessary, and rub gently. NEVER use a paper towel or other material to clean.

cool, dry environment. 3) Store the unit in its carrying case when not in use, in an upright position and in a

4) Use care in threading the Optic into your camera, avoiding cross-threading.

## **ҮТИАЯЯАW**

freight prepaid. 0-360.com's liability is limited to repair or replacement of the Optic Return Authorization from 0-360.com, and return the unit properly packaged and its option, repair or replace the Optic free of charge. Purchaser must first obtain a mirror surface. If a defect in workmanship or material is discovered, 0-360.com will, at caused by accident, abuse, misuse, exposure to the elements, or scratches to the for a period of one year from date of purchase. This warranty does not cover damage The 0-360 Panoramic Optic is warranted against defects in material and workmanship

only. This warranty supersedes all other warranties, express or implied.

ΕΝΊΟΛΙ

Please read the Care Instructions on back page.

**ITNATAO9MI** 

0004-VO oiseD

Instructions for use with

Parorana Optic

# Quick Start Guide



Proper Zoom

'Donut' fills frame

Zoomed in too far!

'Donut' runs off frame

Not Zoomed in enough!

'Donut' doesn't fill frame

multiple exposures at the same time.

----Use Joystick to set focus spot below center:

8) Press Flash button until flash is off. (A 🕤 will appear on the screen)

9) Press Timer button to turn timer on. (A 🕑 will appear on the screen)

11) Press the shutter button halfway to set Focus, then fully. You have 10 seconds to hide!

12) Other settings to experiment with: White Balance should typically be "Auto",

ISO should typically be "100". You may want to experiment with Bracketing, which takes

---Turn thumbwheel to Macro Focus ( 🌄 )

10) Hold down Focus button and:

A trick is to use a thin piece of paper or tape as a shim to align to center.)

7) Adjust Zoom until image of mirror just fills frame from top to bottom: (NOTE: Depending on your camera's threads, the image may be slightly off-center. This is normal.

Press "MENU" again to continue.

6) Rotate thumbwheel until "F8.0" appears on screen. This is your Aperture (F-stop).

3) Adjust tripod until Optic is vertical (refer to bubble level on top of Optic).

4) Turn Mode Dial to "A" (Aperture Priority), and Drive Mode to "[]" (Single).

---SIZE to "2240 x 1680"

---QUALITY to "FINE"

5) First time setup: Press "MENU". Then use Control Button to set:

1) Mount Camera to tripod, securely, with lens pointing vertically.

0-360 Panoramic Optic Setup for Casio QV-4000

### A note about Aperture, Depth of Field, and Field of View 2) Thread 0-360 Panoramic Optic (with thread adapter) to camera. (Do not overtighten.)

below the horizon.

Depth of Field in focus.

longer exposure times.

blur.)

Aperture- a mechanism behind the camera lens similar to the iris of your eye, opening and closing to adjust the amount of light entering the camera. The aperture opening also determines the Depth of Field of the image.

Depth of Field- describes the objects in the image which are in focus, in terms of their distance from the camera. For example, a camera focused at 30m, with a Depth of Field of 8m, will have objects from 26-34m from the camera in focus. Objects

closer than 26m or further than 34m will start to become blurry.

Field of View- the vertical Field of View (vFOV) of the 0-360 attachment. The 0-360

has a vFOV of 115 degrees, meaning it will "see" from 52.5° above the horizon to 62.5°

A smaller Aperture opening (higher F-Stop number) allows less light to enter the

camera, but yields a higher Depth of Field. With a high F-Stop, the shutter speed

needs to be slowed down to allow more light (else a dark photo), but will have more

A larger Aperture opening (lower F-Stop number) allows more light to enter the

camera, but a lower Depth of Field. This means the shutter speed can be faster, but fewer objects will be in focus. (With slower shutter speeds, moving objects may

The 0-360 is designed to operate with a camera F-Stop of F8.0 or higher (preferably 9

or 10). This provides a high enough Depth of Field to allow the entire mirror to be in focus. With lower F-stops, the shutter speed can be increased, but the upper or lower

portions (or both) of the mirror may not be entirely in focus. This means the image far above or far below the horizon may not be sharply focused. This may not be a problem, as many times the sky or the ground may not need to be sharply focused.

With the Casio QV-4000, you should be able to get a vFOV of approximately 115

For best results, shoot a well-lit scene! With high F-Stops, you need good lighting, or

moo.086-0@selfs 2483 Simons Ct. Carson City, NV 89703 div. of Bellissimo, Inc. 3600 דמתטרמותיב באוטרים, לעגר טוב כעבלי

degrees, with good focus across the entire image.

 $\mathbf{U}(\mathbf{0})$